
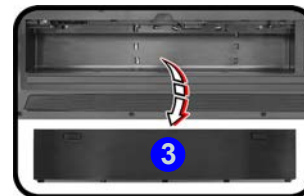


Removing the Battery

We recommend that you do not remove the battery yourself. If you do need to remove the battery for any reason (e.g. long term storage) see below.

1. Turn the computer off, and carefully turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow, and hold it in place.
4. While holding the latch **2** in place, slide the battery out from point **3** in the direction of the arrow **4**.
5. Remove the battery.

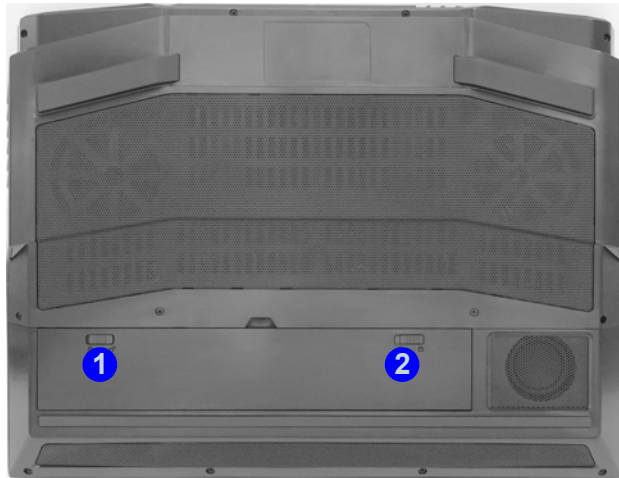

Bottom Cover Removal Warning

Do not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk/RAM/optical device etc., for any reason, please contact your distributor/supplier for further information.

Figure 3 - 17
Battery Removal

Inserting the Battery

1. Orientate the battery as illustrated below and align the battery with the edges of the battery compartment.
2. Insert it into the compartment in the direction of the arrow ① (it should click into place).
3. Slide the latch ② in the direction of the arrow into the lock position.

Figure 3 - 18
Battery Insertion

